
Installation Instructions




DCCRound/Flat Shade

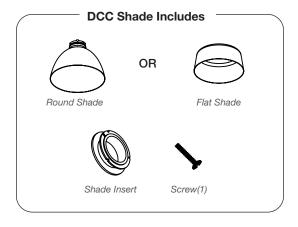

WARNING: Fingerprints are non-removable. Industrial gloves required during installation.

Installation


1 Align Shade onto Module. Turn clockwise until secure. Note: Shade screw hole must align with empty Module screw hole

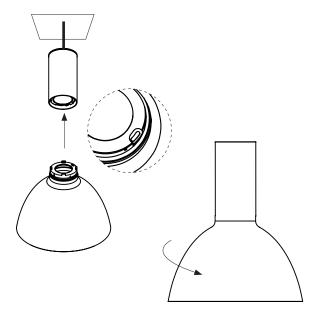





3 Align Shade Insert inside of Shade. Turn a quarter of the circumference to secure.

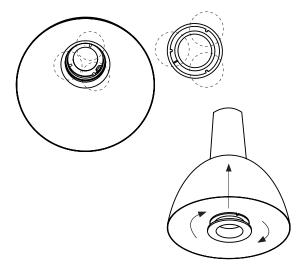

Installation complete!

